
NOTE: Your components and connection locations may vary by model.

注意事項:您的組件與連接位置可能會因型號而異。

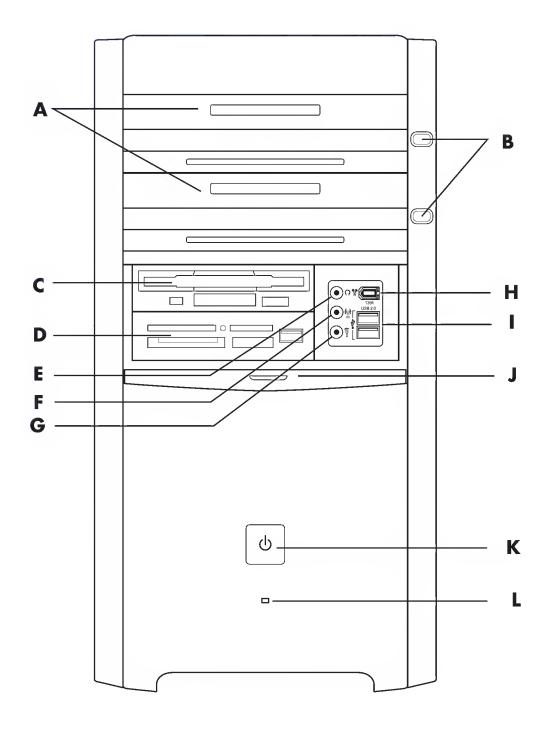

A − Optical drives

B — Optical drive Eject buttons

C — Floppy drive

D — Card reader

E — Headphones

F — Audio Line In

G — Microphone

H - FireWire (IEEE 1394) port

■ USB 2.0 ports

J — Door

 \mathbf{K} — On button with Indicator

L — Hard drive Activity light

A – 光碟機

B - 光碟機的「退出」鈕

C – 軟碟機

D - 讀卡機

E - 耳機

F - 音訊音源輸入孔

G — 麥克風


H - FireWire (IEEE 1394) 連接埠

■ - USB 2.0 連接埠

J - 外蓋

K - 主機開關按鈕及指示燈

┗ - 硬碟作業指示燈

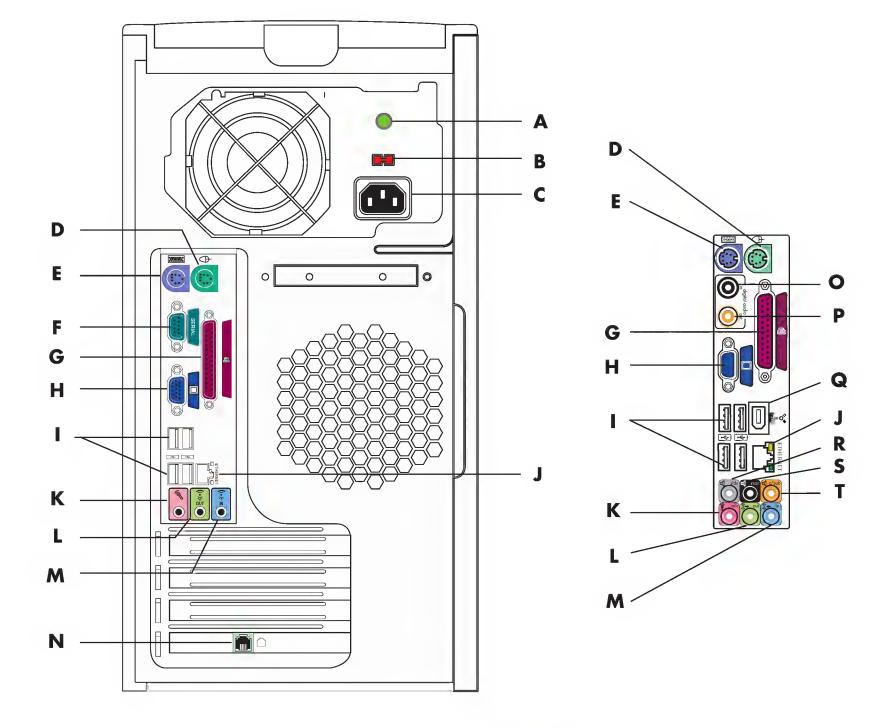

A — Power LED

B — Voltage selector

C — Power Cord connector

D — PS/2 Mouse connector

E - PS/2 Keyboard connector

F — Serial port

G — Parallel port

H - VGA Monitor port

■ 4 USB 2.0 ports

J - LAN (Ethernet)

K — Microphone connector

L — Audio Line Out

M — Audio Line In

N - Modem (Line In RJ-11)

Select models only:

• Digital Audio In

P — Digital Audio Out

Q — FireWire (IEEE 1394) portR — Side speaker port

S — Rear speaker port

T — Center speaker/subwoofer port

A — 電源 LED

B - 電壓選擇開關

C - 電源線插孔

D - PS/2 滑鼠接頭

E - PS/2 鍵盤接頭

F - 序列埠

G - 並列埠

H - VGA 顯示器連接埠

■ - 4個 USB 2.0 連接埠

J – LAN (乙太網路)

K - 麥克風插孔

L 一音訊音源輸出孔

M — 音訊音源輸入孔N — 數據機(線路輸入 RJ-11)

僅限於部分型號:

○ - 數位音訊音源輸入孔

P - 數位音訊音源輸出孔

Q - FireWire (IEEE 1394) 連接埠

R - 側置喇叭連接埠

5 - 後置喇叭連接埠

T - 中置喇叭/重低音喇叭連接埠

